




Freightliner 114SD Snow Plow

Item No. MMS147



It is highly recommended that you visit  
[www.metal-earth.com/360/mms147](http://www.metal-earth.com/360/mms147)  
 to see the completed model before assembling your own

## Metal sheets

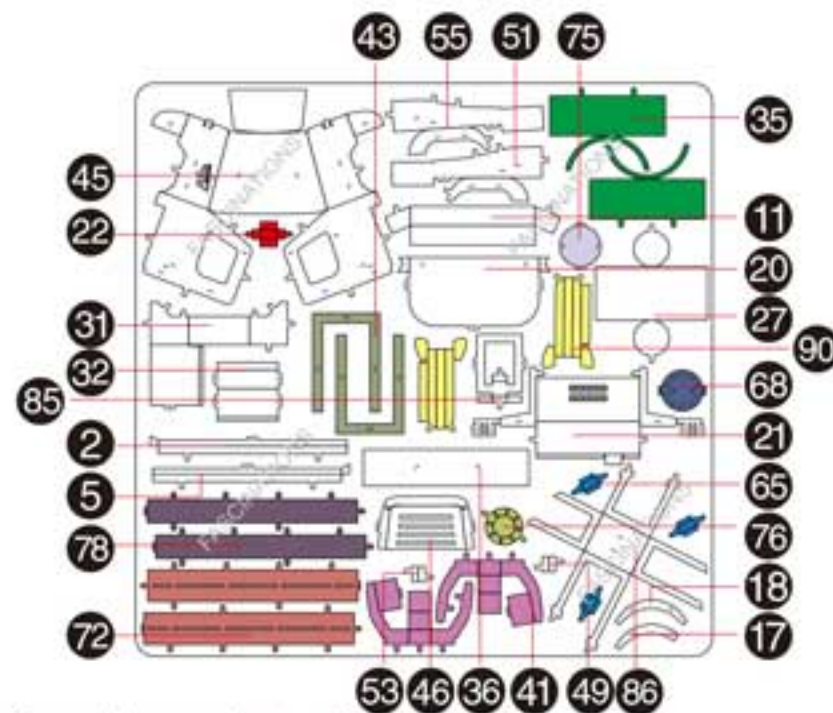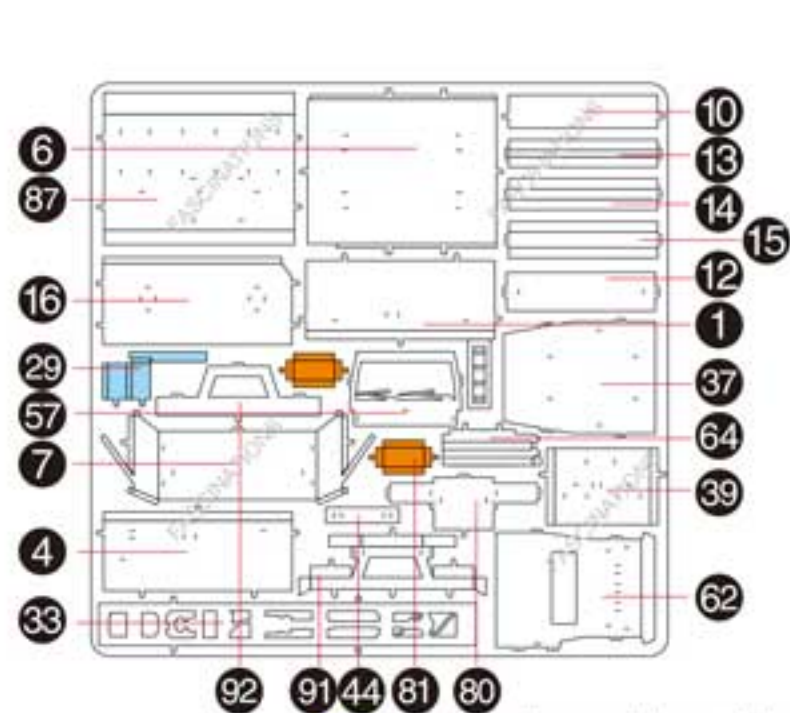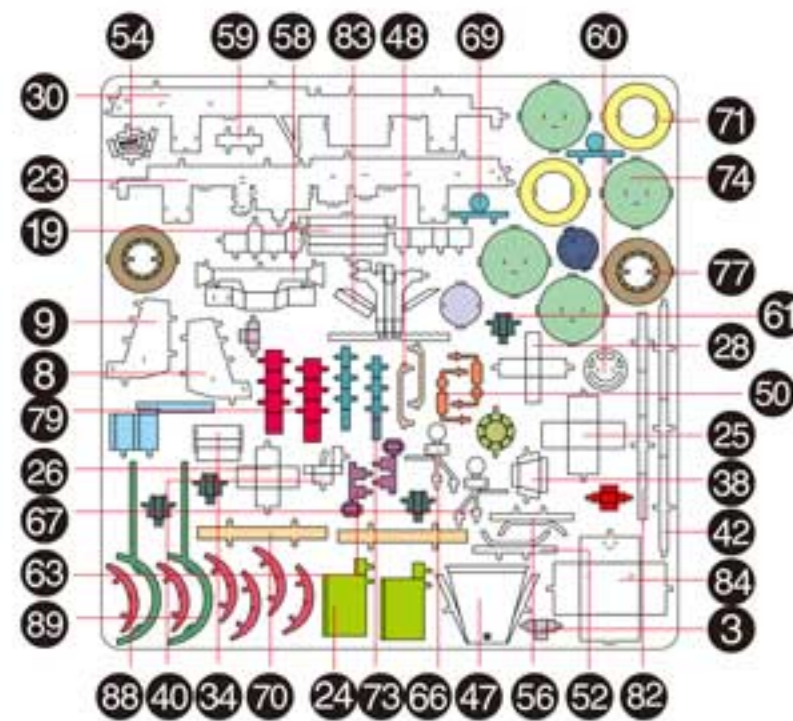

In order to avoid possible injury from sharp edges, please carefully discard the metal sheet after parts have been removed

Insertion tabs are inserted and then folded

Insertion holes

Fold lines can be seen as shown here

**Legends:**

- E** Engraved side
- NE** Non-engraved side
- Attention point
- Insert tab and bend 90 degrees
- Insert tab and twist 90 degrees

**Assembly tip:**  
 If needed, slightly twist tabs to hold parts together then untwist and bend them down for a nice finish

**Recommended tools:**

- Wire cutters: helpful for taking parts from the metal sheets.
- Tweezers or needle nose pliers: helpful for folding parts, bending and twisting tabs.

## Assembly Flow Chart

